

Muc-Off®


AIRMACH — **ELECTRIC** — **MINI INFLATOR** **PRO**



USER MANUAL

CAUTION

If using the inflator with TPU inner tubes with resin valves or inner tubes with plastic valve stems, be sure to connect them with an extension air hose, or the valves may melt due to overheating.

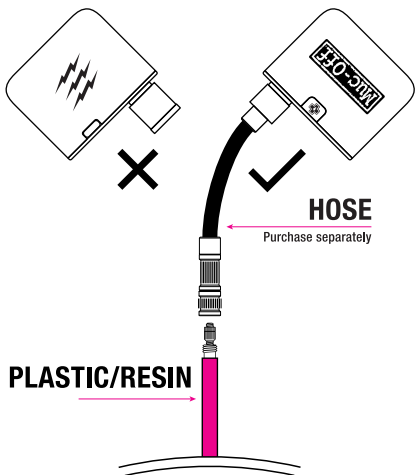

CAUTION HOT!
Valve may be hot directly after inflation.

PACKING LIST



INFLATOR



SILICONE CASE



 
RECYCLED STORAGE BAG



USB-C CABLE



INFLATABLE TOY NOZZLE



HOSE



BALL NEEDLE



PRESTA VALVE CONVERTER



SPARE VALVE SEAL




VALVE PIN



SPARE O RING

PRODUCT DETAILS & SPECIFICATIONS

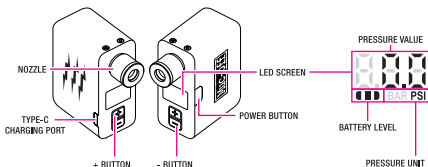


SIZE: 64.5*63*28mm
BATTERY: 7.4v*450mAh
CURRENT: 2.5 - 7.5 A

WEIGHT: 120g
MAX PRESSURE: 120PSI
CHARGING MODE: Type-C 5V 1.5A

HOW TO CHANGE THE AIR NOZZLE FROM PRESTA TO SCHRADER FITTING

The inflator is ready for Presta valves right out of the box. For Schrader valves, reassemble the nozzle as shown below. Set the inflator to match the valve type on your bike before you ride.

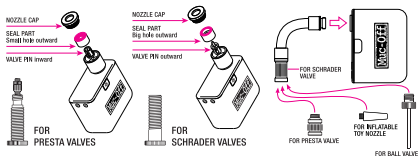


OPERATION

1 POWER ON & SET TARGET AIR PRESSURE

Long press the Power button to power on, illuminating the screen, showing the real-time air pressure reading.

Press '+' and '-' together to switch between PSI & BAR. Adjust target pressure using '+' & '-' buttons. The set pressure will display for 3 seconds before reverting to current pressure.

The pressure gauge is accurate to 1-2psi

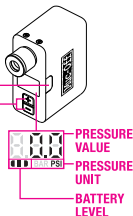


2 CONNECT TO THE AIR VALVE

A. Push the inflator nozzle onto the valve stem and hold tight.


Note - when the tyre is not completely flat, start the pump before inflating and attaching it to the valve.

USE THE HOSE

B. Hold the hose and suitable adapter, then connect it to the air valve. it's recommended to use the hose when using Schrader valve.

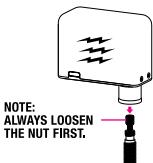

NOTE:
ALWAYS LOOSEN
THE NUT FIRST.

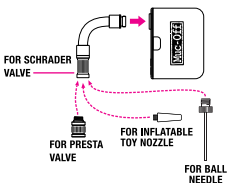


3 INFLATING

Press the Power Button to start inflation. It will auto shut off when the target air pressure is reached.

4 SHUT DOWN

Long-press the Power Button to power off. If the pump is not started and there is no operation within 1 minute whilst it is powered on, the Inflator will automatically shut down.

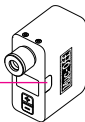


NOTES

- 1 Fully charge the pump before use.
- 2 The pump may get hot during operation, so please use it with the silicone cover provided. We suggest wearing Rider Gloves.
- 3 Press the pump against the valve before and during inflation, adjust the position to prevent air leakage.
- 4 You can store the inflator and accessories in the recycled storage bag included.

CHARGING

Only charge with the charging cable provided. It takes about 30 minutes to fully charge the inflator, during which time the indicator lights will illuminate and flash incrementally. Once the battery is fully charged, all the indicator lights will be illuminated.

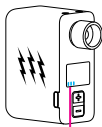

BATTERY LEVEL DISPLAY

WORKING PERFORMANCE WHEN FULLY CHARGED:

Tyre Type:	Pressure:	Inflating Time:	Available Times:
700x25c	0-80PSI	50 sec	4
700x25c	0-120PSI	120 sec	2
700x28c	0-80PSI	60 sec	3
700x32c	0-80PSI	80 sec	2
29x2.2	30-50PSI	60 sec	2
29x2.2	0-30PSI	70 sec	3
700x45c	30-50PSI	30 sec	6
700x45c	0-50PSI	80 sec	3

The data above is approximate inflation times per change.

MANUFACTURER

Muc-Off Ltd. Unit 23, Branksome Business Park, Bourne Valley Road, Poole, Dorset, BH12 1DW, UK. T: +44 (0) 1202 307790.

Muc-Off (Ireland) Ltd. Unit 3D, North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.

CUSTOMER SERVICE

customerservice@muc-off.com

WARRANTY

The Muc-Off product is covered under warranty by Muc-Off to be free of defective parts and materials for a period of 12 months from the date of purchase (or as otherwise stated at point of sale) providing the product is used for normal domestic duties. All warranty periods commence on the date of purchase and are none transferable. This warranty shall not apply to defects caused by misuse, neglect, accident, improper storage, installation or handling, frost damage, repair or alteration not carried out or authorised by us or the use of incorrect electrical supply voltage, contaminated water supply or unsuitable chemicals.

The guarantee is limited to the provision of repairs, free of charge within the specified period providing the above conditions are met and the original proof of purchase is provided. This warranty applies to products used for domestic use only and shall not apply to any products used for commercial purposes. Muc-Off shall not be liable in any event at any time for any indirect or consequential loss or damage. The rights and benefits under warranty are additional to your statutory rights which are not affected by this warranty. Please register your Airmach Electric Mini Inflator Pro online to activate your 12-month warranty, it only takes a few minutes: www.muc-off.com/register-your-product



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

EU DECLARATION OF CONFORMITY

We hereby declare that the machine described below complies with the relevant basic safety and health requirements of the EU Directives, both in its basic design and construction as well as in the version put into circulation by us. This declaration shall cease to be valid if the pump is modified without our prior approval.

Product: Muc-Off Airmach Electric Mini Inflator Pro

Type: 21086

Relevant EU Directives:

2014/30/EU

2014/35/EU

2011/65/EU

Applied harmonized standards:

ENIEC 61000-3-2:2019+A1:2021

EN 61000-3-3:2013+A1:2019

EN55032:2015+A11:2020

EN55035:2017+A11:2020

EN61000-3-2:2019+A1:2021

EN61000-3-3:2023+A1:2019

EN60335-1:2012/A15:2021

The undersigned act on behalf and under the power of attorney of the company management.

A. Trimnell



Muc-Off Ltd. Unit 23, Branksome Business Park, Bourne Valley Road,
Poole, Dorset, BH12 1DW. T: +44 (0) 1202 307790.

Muc-Off (Ireland) Ltd. Unit 3D, North Point House, North Point Business
Park, New Mallow Road, Cork, T23 AT2P, Ireland.



Designed in the UK. Made in China.